

**iwata**

by ANEST IWATA

# Custom Micron

AIRBRUSH SERIES

取扱説明書 | Operating Instruction Manual

ICM1102-IM-OAJ



# ABSOLUTE PRECISION™

## 究極の精度



CM-C PLUS



CM-C



CM-B



匠 TAKUMI

Experienced airbrush users who demand absolute precision and unmatched extreme detail spray choose Iwata Custom Micron Series airbrushes. Every Custom Micron head system is custom matched and hand-tuned to meet Iwata's rigorous performance standards for superior atomization. Custom Micron is a one-of-a-kind airbrush experience with superb handling for extreme detail.

*To maintain your Custom Micron at its peak performance, proper care and attention must be observed.*

# NEED ASSISTANCE ?

If you have any issues or warranty service questions, contact your local ANEST IWATA affiliate before returning to your place of purchase.

**ANEST IWATA-MEDEA, INC.**

Portland, Oregon U.S.A.  
+1-503-253-7308 (M-F)  
info@iwata-medea.com  
www.iwata-airbrush.com

**ANEST IWATA SOUTH-EAST ASIA CO., LTD.**

Bangkok, Thailand  
+66-(0)-2643-2870  
www.anest-iwatasoutheastasia.com

**ANEST IWATA SOUTH AFRICA (PTY) LTD.**

Johannesburg, Republic of South Africa  
+27-11-463-2169/2265/2223  
www.anest-iwata.co.za

**ANEST IWATA CORPORATION**

Yokohama, Japan  
+81-(0)45-591-1111  
www.anest-iwata.co.jp

**ANEST IWATA STRATEGIC CENTER**

Cardano al Campo, Italy  
+39-0331-733120  
www.anest-iwataeu.com

**ANEST IWATA SHANGHAI**

Shanghai, China  
+86-(0)21-6407-9713 / 15 / 16  
www.anest-iwata-sh.com

**ANEST IWATA RUS LLC**

Moscow, Russia  
+7-495-938-77-28  
www.anestiwata.ru

**ANEST IWATA AUSTRALIA PTY LTD.**

Mt. Druitt, NSW  
+61-(02)-9853-2000  
www.anest-iwata.com.au

**ANEST IWATA (U.K.) LTD.**

Neots Cambs, England  
+44-(0)1480-405419  
www.anest-iwata.co.uk

**ANEST IWATA MOTHERSON LTD.**

Uttar Pradesh, India  
+91-(0)120-4600500 / 14 / 17  
www.anest-iwata.co.jp

**CENTURY TRADING CO., LTD.**

Seoul, Korea  
82-2-2163-0300  
www.centradng.co.kr

## FEATURES

### **CUSTOM MATCHED HAND-TUNED HEAD SYSTEM**

Every Custom Micron head system is custom matched and hand tuned to meet Iwata's rigorous performance standards for superior atomization.

A custom matched head system (#1) consists of four parts — needle crown cap (#1A); nozzle cap (#1B); nozzle (#1C); and the head nozzle base (#1D) — which are hand-tuned to work together. These components and the custom matching process create the Custom Micron's exacting performance.

### **ERGONOMIC MAIN LEVER**

The ergonomic main lever enhances comfort during use for greater ease, control and less finger fatigue.

### **IWATA PISTOL-GRIP FILTER**

Attaching directly to your airbrush and comfortable to hold, the Iwata Pistol-Grip Filter assists in delivering clean, dry air through its super-fine 5-micron filter. Built up moisture is evacuated through a spring-loaded release valve.

### **MAIN LEVER ADJUSTMENT**

The needle spring adjuster (#8) gives you full control over the feel of the main lever's back and forth movement. The more you tighten, the greater the main lever resistance. The looser it's adjusted, the smoother the main lever will feel. Adjust to what feels comfortable to you.

### **NEEDLE TENSION ADJUSTMENT CUTAWAY**

Using a small screwdriver you can easily adjust the needle packing screw (PTFE) (#4) to add or release tension on the needle to customize your Custom Micron experience.


### **CROWN CAP (#1A)**

The crown cap physically protects the needle while spraying very fine lines. When spraying larger areas or stippling with the Custom Micron, we suggest removing the crown cap and screwing it onto the crown cap dock.

**PRESET WITH CROWN CAP DOCK (#12)**

A preset is a threaded adjusting screw mounted behind the handle which limits the distance the main lever can be pulled back. This provides accurate paint volume control and is especially useful for repetitive, precision work.

When stippling or for any reason you have to remove your crown cap, simply screw it onto the crown cap dock located at the end of the preset so it doesn't get lost.

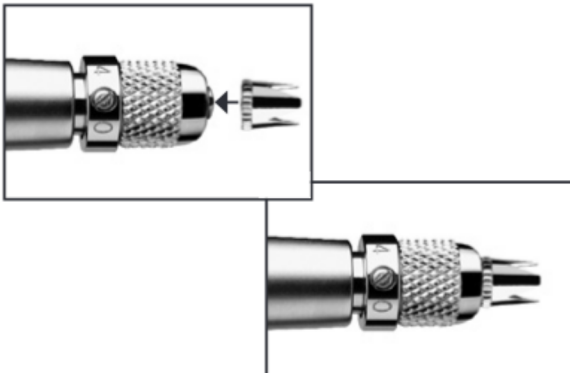**QUICK FLUSH CUTAWAY HANDLE (#11B) (CM-C PLUS AND TAKUMI - OPTIONAL FOR CM-B AND CM-C)**

The quick flush cutaway handle allows quick paint clog removal without removing the handle or needle.

1. Grip the exposed needle chucking nut (#10) with your fingers.
2. Pull it back while simultaneously depressing the main lever.
3. Repeat this process several times until the airbrush is clog free and spraying normally.

- The increased paint flow past needle and nozzle tip removes many clogs.
- Don't let the needle "snap" back into place. This could damage the nozzle.

**MICRO AIR CONTROL (MAC) VALVE (CM-C PLUS ONLY)**

The MAC Valve enables infinite airflow control at the airbrush's head providing control between stipple, extreme detail and medium spray characteristics.

- Spray coarse stippling effects and increase to full atomization in a quick turn.
- Fine tune the airflow.
- Maximize paint atomization control.
- Open the valve fully during cleaning. The higher pressure pulls more paint through the airbrush.

## GETTING STARTED

### COMPRESSOR

The Custom Micron does not require a high pressure air source for most applications because lower pressures are best suited for ultra-fine, slow, high-detail spraying, ideally between 12 and 15 psi. Realizing the Custom Micron's full benefits requires an adjustable or regulated air source with an air storage tank. Other compressor considerations include the length of use while spraying and the environment, or amount of space, you spray in.

### ASSEMBLY

1. Screw the air hose onto the compressor.
2. Screw the air hose onto the airbrush.
3. Adjust the pressure to between 12 and 15 psi to start.
4. Check for any air leaks in the compressor or air hoses.
5. Place a few drops of cleaning solution or water into the airbrush's bowl.
6. Point the airbrush away from you.
7. Press down on the main lever (#13) to start airflow through the airbrush.
8. Pull the main lever back, opening the airbrush's nozzle, spraying the water or cleaning solution to see how the Custom Micron sprays.

### PAINT PREPARATION

For non-specific airbrush paints, proper preparation, including filtering the paint through a nylon mesh, is critical for best performance. Thin paint with its proper solvent, and make repeated passes across the work to build up the color. This improves your work's quality and decreases your airbrush's cleaning time.

- Custom Microns spray very thin paint best.
- Thin paint with its proper solvent.
- Filter paint through paint filters or mesh.

### CAUTION

- **Always spray in well ventilated areas.**
- **Do not spray solvent based (flammable) paints around open flames.**
- **Use the appropriate respirator to safely filter out paint vapors particular to your specific paint type.**
- **Wear eye protection to prevent paint contact with eyes.**
- **Never exceed the airbrush's pressure limit (98 psi).**

**GENERAL OPERATION****AIR PRESSURE**

Working pressures can vary depending on the type of surface, the desired spray texture and the paint's viscosity.

Try using 12-15 psi to take full advantage of the Custom Micron's unique, spray characteristics.

 **WARNING**  
Do not exceed 98 psi.

**FINE-LINE SPRAY**

1. Depress the main lever (#13) to start airflow.
2. Position the airbrush close to the surface, between 1/16 and 1/2 inch.
3. Pull the main lever back slightly to start paint flow.
  - A longer distance to the surface produces wider lines.
  - A shorter distance to the surface produces narrower lines.
  - Increased air pressure increases spray width.
  - Decreased air pressure decreases spray width.
  - The smallest lines are determined by skill and practice.

 **CAUTION**  
The needle and nozzle are very delicate. Even a slight bend on the needle's tip adversely effects the spray pattern.



### **WIDE-LINES AND BLENDING**

1. Depress the main lever (#13).
2. Position the airbrush from 1/2 to 6 inches away from the surface.
3. Pull the main lever back much further to release more paint to cover the bigger area.
  - A longer distance to the surface produces wider lines.
  - A shorter distance to the surface produces narrower lines.
  - Increased air pressure increases spray width.
  - Decreased air pressure decreases spray width.
  - The Custom Micron's maximum usable line width is approximately 1-1/2 inches.

### **STIPLING**

Iwata airbrushes are designed to produce a wide range of stippling textures.

1. Unscrew the crown cap (#1A) and screw onto the cap dock located on the end of the preset handle (#12).
2. Unscrew the nozzle cap (#1B).
3. Adjust the air pressure between 5 and 30 psi.
  - Low air pressure creates coarse stipples.
  - High air pressure provides fine stipple effects.
  - Paint viscosity also effects stippling texture.

## MAINTENANCE

### CLEANING THE AIRBRUSH BETWEEN COLORS

1. Dump out the excess paint from color cup.
2. Rinse the cup with the appropriate cleaning solution.
3. Wipe out any leftover paint with paper towel.
4. Spray cleaner through the airbrush until it sprays clear.
5. Add the next color to the color cup.
6. Repeat cleaning procedure when finished.

### CLEANING THE NEEDLE

1. Unscrew and remove the back handle (#11).
2. Loosen the needle chucking nut (#10) by hand.
3. Pull the needle (#9) out.
4. Clean the needle with a damp soft cloth by wiping only towards the sharp needle point.

#### CAUTION

**Needles are extremely sharp and delicate. Be careful not to drop or damage your needle while cleaning. Only wipe the needle in a back to front direction so as not to puncture yourself.**

5. With main lever depressed, gently re-insert the needle so as not to damage the sharp tip. The needle is fully seated when it comes to a complete stop.

#### WARNING

**Do not use excessive force.**

6. Tighten the needle chucking nut by hand to hold needle in place.

#### WARNING

**Do not over tighten.**

7. Pull the main lever back and forth to visually confirm the needle's ability to move.
8. Screw the handle back on to the airbrush.

#### WARNING

**The most probable time to damage the needle is when the needle passes through the main lever (#13) and through the needle packing set (#4).**

**If the needle stops abruptly, retract and examine the main lever mechanism for proper assembly and re-insert the needle.**

#### BEFORE EACH SESSION

Spray water or the appropriate paint solvent through the airbrush to make sure the airbrush is working properly.

#### **AFTER EACH SESSION OR IF YOUR AIRBRUSH IS CLOGGED**

1. Increase the air pressure.
2. Spray cleaning solution for a short time.
3. Clean the needle if necessary.

This cleaning method helps clean the paint passage, the nozzle, and the needle thoroughly.

#### **⚠ CAUTION**

**NEVER soak your entire airbrush in any liquid. NEVER store your airbrush with spray medium or cleaning agents in the fluid cup.**

#### **LUBRICATING THE NEEDLE PACKING (PART OF #4)**

If your main lever (#13) does not move backward and forward smoothly, lubricate the needle packing (#4) with Iwata Lube.

1. Unscrew the handle (#11).
2. Loosen the needle chucking nut (#10).
3. Remove the needle (#9).
4. Place only one drop of Iwata Lube where the taper of the needle begins and spread evenly around tapered edge.
5. Depress the main lever, then reinstall the needle gently into the airbrush until you feel a positive stop.

6. Tighten the needle chucking nut.

7. Screw the handle onto the airbrush body.

#### **⚠ CAUTION**

**DO NOT over-lube the needle; transferring excess lube into the nozzle may cause severe paint flow problems.**

**DO NOT use light machine oil or WD-40 for lubrication. These lubes cause the needle to stick when it moves through the needle packing and can also get into the air system.**

#### **LUBRICATING THE AIR VALVE O-RING (#14B)**

If your main lever (#13) is slow to rise, lubricate the air valve O-ring.

1. Unscrew the handle (#11).
2. Unscrew the needle chucking nut (#10).
3. Remove the needle (#9).
4. Unscrew the needle spring adjuster (#8).
5. Remove the needle spring (#7).
6. Remove the needle chucking guide (#5).
7. Pull the main lever up and out.
8. Use tweezers to pull out the air valve piston (#14A).

9. Clean the valve piston with a cotton swab.
10. Clean the hole at the bottom of the main lever housing with a cotton swab. Clean until cotton swab comes out clean.
11. Place 1 drop of Iwata Lube on the blunt end of the needle and insert into the valve piston shaft. Move around to coat the air valve O-ring.
12. Insert the valve piston back into the hole at the bottom of the main lever housing.
13. Place the main lever back into the main lever housing.
14. Press the main lever up and down a few times. It should spring back up smoothly when depressed.
15. Insert the needle chucking guide into the airbrush body.
  - a. Twist to position the small tab on the auxiliary lever as shown in the parts guide.
16. Place the needle spring over the needle chucking guide.
17. Screw the needle spring adjuster into the airbrush body. The more you screw it in, the greater the main lever resistance. The looser it's adjusted, the smoother the main lever feel (your personal preference).
18. Push down on the main lever at least once.
19. Push down on the main lever and carefully insert the needle.

 **WARNING**

**This is the most probable time to bend the needle point.**

20. Screw the needle chucking nut onto the needle chucking guide
21. Screw the handle back into the airbrush body

 **CAUTION**

**DO NOT over-lube the air valve O-ring.**

**DO NOT use light machine oil or WD-40 for lubrication. These lubes cause the needle to stick when it moves through the needle packing and can also get into the air system.**

**If it becomes absolutely necessary to dismantle the airbrush remember that most situations, unless otherwise directed, do not require tools.**

TROUBLESHOOTING PROCEDURES		
SYMPTOM	PROBLEM	SOLUTION
Bubbles in Color Cup or Bottle	Loose nozzle cap	Tighten nozzle cap (#1B) finger tight
	Improper nozzle to head nozzle base connection*	See head system (#1) to reseal the nozzle
	Cracked or damaged nozzle	See head system (#1) to replace the head system
Double Line	Dried paint on needle tip (tip-dry)	See Cleaning the Needle (page 10)
	Dirty airbrush	See Cleaning the Airbrush Between Colors (page 10) See Cleaning the Needle (page 10)
	Debris on nozzle tip	See head system (#1) and clean the nozzle (#1C)
	Bent needle	See needle (#9) to replace needle
	Cracked or damaged nozzle	See head system (#1) to replace the head system
Not Spraying	Loose needle chucking nut (#10)	Finger tighten
	Needle stuck	Pull out / break free the needle
	Improper air pressure	See specific compressor instructions to raise or lower the air pressure
	Paint too thick	See Paint Preparation (page 7)
	Clogged nozzle	See head system (#1) and clean the nozzle (#1C)
	Cracked or damaged nozzle	See head system (#1) to replace the head system

**⚠ CAUTION**

\* The most likely time to damage the nozzle (#1C) is upon removal from the airbrush. Because the head system can be removed entirely, the nozzle does not need to be removed at all. If the nozzle is never removed, you do not have to worry about "improper nozzle to head nozzle base connections".

Nozzle contains Nickel.

TROUBLESHOOTING PROCEDURES		
SYMPTOM	PROBLEM	SOLUTION
Skipping	Dried paint on needle tip (tip-dry)	See Cleaning the Needle (page 10)
	Paint too thick	See Paint Preparation (page 7)
	Improper nozzle to head nozzle base connection*	See head system (#1) to reset the nozzle
	Dirty airbrush	See Cleaning the Airbrush Between Colors (page 10) See Cleaning the Needle (page 10)
	Cracked or damaged nozzle	See head system (#1) to replace the head system
Spattering	Dried paint on needle tip (tip-dry)	See Cleaning the Needle (page 10)
	Paint build-up in crown cap	Unscrew crown cap (#1A) and clean
	Air pressure too low	See specific compressor instructions to raise the air pressure
	Paint too thick	See Paint Preparation (page 7)
	Dirty airbrush	See Cleaning the Airbrush Between Colors (page 10) See Cleaning the Needle (page 10)
Main Lever Sticks (Back and Forth)	Dirty airbrush	See Cleaning the Airbrush Between Colors See Cleaning the Needle (page 10)
Main Lever Sticks (Up and Down)	Paint on air valve packing o-ring (#14B)	See Lubricating the Air Valve O-Ring (page 11)

**⚠ CAUTION**

\* The most likely time to damage the nozzle (#1C) is upon removal from the airbrush. Because the head system can be removed entirely, the nozzle does not need to be removed at all. If the nozzle is never removed, you do not have to worry about "improper nozzle to head nozzle base connections".

Nozzle contains Nickel.

## REPLACEMENT PARTS AND ACCESSORIES

### MATCHED HEAD SYSTEM (#1)

Though engineered to last decades the components may still wear or become damaged and need replacement. If this happens, we recommend replacing the whole head system to keep the airbrush's exquisite performance at peak levels. However, replacing only the nozzle can be done by Iwata's highly trained technical department.

The set includes: needle crown cap (#1A); nozzle cap (#1B); nozzle (#1C); and the head nozzle base (#1D).

1. Unscrew the handle (#11).
2. Loosen the needle chucking nut (#10).
3. Gently pull the needle (#9) part way back. It doesn't need to be fully pulled out.
4. Unscrew the entire head system.

**NOTE: Removing the head system the first time requires a good grip and some torque. Use the Iwata Soft Jaw Pliers or wrap a rubber band around the head system base and use a pair of standard pliers to unscrew it.**

5. Screw the new head system onto the airbrush body until finger tight. Tighten a bit more snug with the Iwata Soft Jaw Pliers.

 **Nozzle contains Nickel.**

6. Push the needle all the way forward until it seats in place.

7. Tighten the needle chucking nut.

8. Screw the handle onto the airbrush body.

*Keep a spare head system on hand for unforeseen accidents.*

### NEEDLE (#9)

Iwata needles are made with flexible, spring-steel which resists breakage and increases durability.

If the long, tapered, extremely fine needle point becomes severely bent, it must be straightened before pulling it back through the nozzle. If not, the bent needle might damage the nozzle as it's pulled through.


*Keep a spare needle on hand for unforeseen accidents.*

### CAUTION

- Needles are sharp.
- Needle tips are bent easily.

### QUICK DISCONNECT SETS (OPTIONAL ACCESSORY)

A quick disconnect joint is screwed onto the air hose and a quick disconnect adapter is screwed onto each airbrush. When using multiple airbrushes the quick disconnect joint facilitates changing airbrushes on the same air hose quickly.

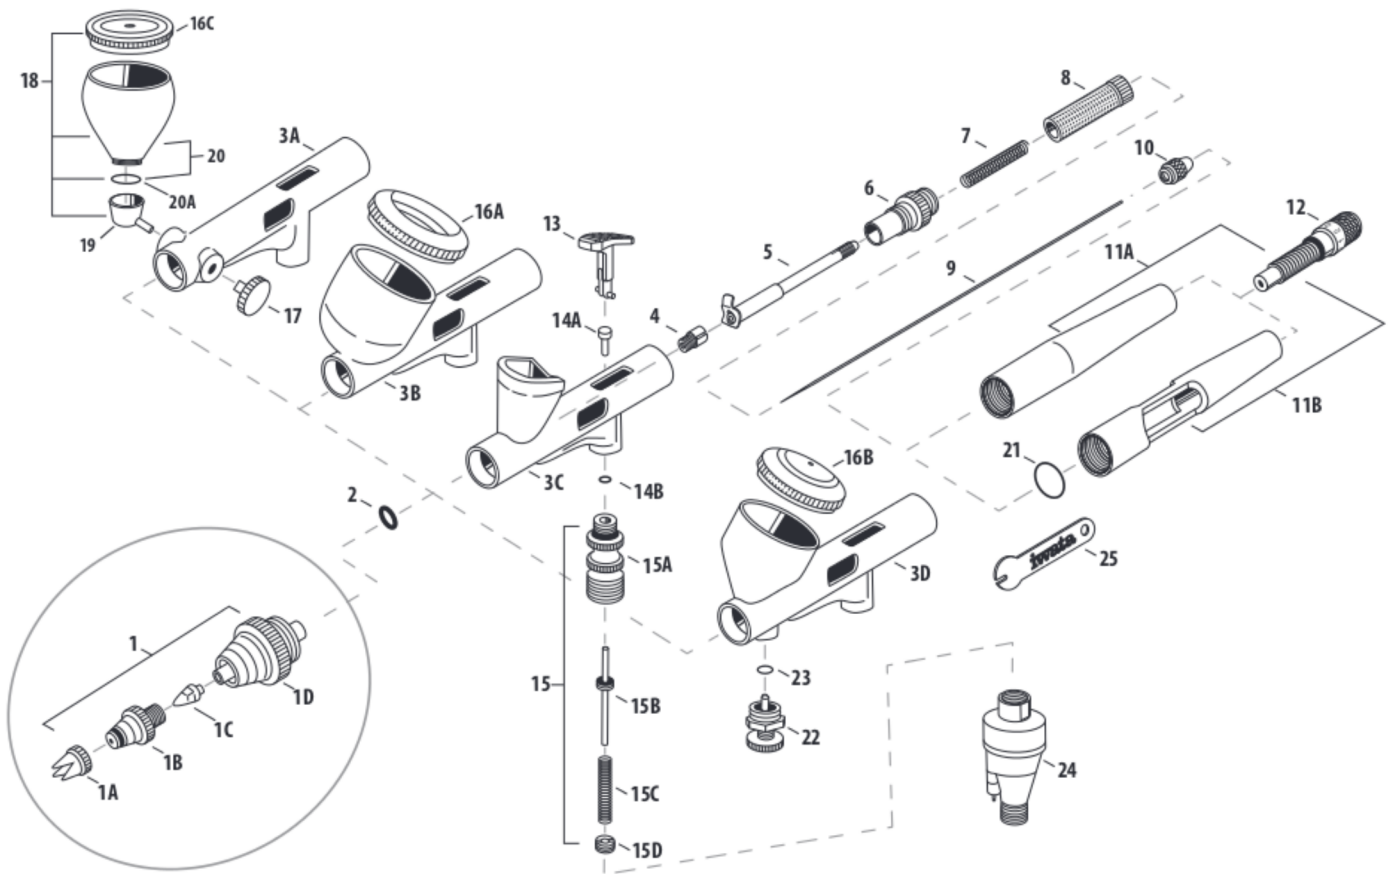



## IWATA CUSTOM MICRON AIRBRUSH SERIES (VERSION 2) REPLACEMENT PARTS

#	ITEM DESCRIPTION	PRICE CODE	ITEM #	CM-B	TAKUMI	CM-C	CM-C+
1	Head System C1	L	I5351	■	■	x	x
	C2	L	I5352	x	x	■	■
1A	Head Needle Crown Cap	D	I5351D	■	■	■	■
1B	Head Nozzle Cap C1	G	I5351C	■	■	x	x
	C2	G	I5352C	x	x	■	■
1C	Head Nozzle C1	H	I5351B	■	■	x	x
	C2	H	I5352B	x	x	■	■
1D	Head Nozzle Base	J	I5351A	■	■	■	■
2	Head Packing	C	I5802	■	■	■	■
3A	Takumi Body*	-	-	x	■	x	x
3B	CM-C Body*	-	-	x	x	■	x
3C	CM-B Body*	-	-	■	x	x	x
3D	CM-C Plus Body*	-	-	x	x	x	■
4	Needle Packing Screw (PTFE)	D	I5902	■	■	■	■
5	Needle Chucking Guide	C	I1157	■	■	■	■
6	Spring Guide	C	I5903	■	■	■	■
7	Needle Spring	B	I5701	■	■	■	■
8	Needle Spring Adjuster	E	I5751	■	■	■	■
9	Head Needle C1	E	I5404	■	x	x	x
	C1	E	I5406	x	■	x	x
	C2	E	I5402	x	x	■	x
	C2	E	I5403	x	x	x	■
10	Needle Chucking Nut	B	I5601	■	■	■	■
11A	Handle (Preset)	H	I5854	■	■	■	OPT
11B	Handle (Preset/Single Cut)	H	I5855	OPT	■	OPT	■
12	Handle Crown Cap Dock (Preset)	E	I5861	■	■	■	■

#	ITEM DESCRIPTION	PRICE CODE	ITEM #	CM-B	TAKUMI	CM-C	CM-C+
13	Main Lever	D	I5454	■	■	■	■
14A	Valve Piston	B	I5001	■	■	■	■
14B	Valve Piston Packing	B	I5801	■	■	■	■
15	Air Valve Set	H	I5101	■	■	■	■
15A	Air Valve Body	-	-	■	■	■	■
15B	Air Valve	-	-	■	■	■	■
15C	Air Valve Spring	-	-	■	■	■	■
15D	Air Valve Guide	-	-	■	■	■	■
16A	Cup Lid 0.24 oz / 7 ml	E	I5301	x	x	■	OPT
16B	Cup Lid (Gravity) 0.24 oz / 7 ml	E	I6181	x	x	OPT	■
16C	Cup Lid (Siphon Cut) 0.24 oz / 7 ml	C	I6187	x	■	x	x
17	Blanking Cover	A	I0452	x	■	x	x
18	Cup Assembly 0.24 oz / 7 ml	H	I0710	x	■	x	x
19	Cup Adapter (Side-Gravity)	D	I0700	x	■	x	x
20	Cup (Gravity) 0.24 oz / 7 ml	D	N0702	x	■	x	x
20A	Cup (Gravity) O-ring 0.24 oz / 7 ml	A	N0713	x	■	x	x
21	Handle O-Ring	A	I6051	x	■	x	■
22	MAC Valve Set	D	I1901	x	x	x	■
23	MAC Valve Packing	A	I1902	x	x	x	■
24	Pistol-Grip Filter	-	FA450	■	■	■	■
25	Spanner	B	I1651	■	■	■	■
	QuickFit Quick Disconnect Set	H	I1603	OPT	OPT	OPT	OPT
	QuickFit Quick Disconnect Airbrush Adaptor	C	I1604	OPT	OPT	OPT	OPT
	Airbrush Adapter for Paasche Air Hose	-	J001	OPT	OPT	OPT	OPT
	Airbrush Adapter for T&C/Badger Air Hoses	-	J002	OPT	OPT	OPT	OPT

■ = yes X = no OPT = optional  
\*Replacement parts not available.



All Iwata airbrushes are warranted against all manufacturing defects of material and manufacture or workmanship for a period of FIVE years from date of purchase. This warranty does not cover needles, nozzles, o-rings and internal packings since these parts need to be replaced occasionally due to normal wear. Any other parts or materials that are or become defective so as not to be usable within this period will be repaired or replaced. This warranty does not cover damage caused by negligence or airbrushes which have been altered or abused in any way.

**iwata**

by ANEST IWATA

[www.iwata-airbrush.com](http://www.iwata-airbrush.com)

## ■ 保証・修理サービス

- ・保証期間は、お買いあげの日から5年です。
- ・万一、故障の場合は、お買いあげの販売店または当社支店・営業所までご連絡ください。保証期間中は、無償修理いたします。
- ・本製品の故障または不具合に伴う生産補償、営業補償など二次損失に対する補償は致しませんので、

ご了承ください。

次の場合は保証期間内でもお客様の負担(有償)になります。

- ・取扱説明書の注意事項を守られなかったことによる故障および損傷
- ・お客様の取扱上の不注意による故障および損傷・消耗品の交換・修理
- ・天災、地変、火災、地震、水害、塩害、落雷、公害などによる故障および損傷
- ・純正部品以外の部品が使用されている場合
- ・指定の修理店以外による修理がなされている場合
- ・保証は日本国内においてのみ有効です。

This Warranty is valid only in Japan.

## 【お問い合わせ窓口】

- ◆修理・保守に関するお問い合わせ  
アネスト岩田コーティングサービス株式会社(お問い合わせ先は当社ホームページをご確認ください)
- ◆技術的なお問い合わせ、ご意見、ご希望など当社支店・営業所又はお客様相談室までご連絡下さい。  
(支店・営業所のお問い合わせ先は当社ホームページをご確認ください)

お問合せは



アネスト岩田株式会社

札幌駐在所	TEL 011-831-6141	FAX 011-831-6144	中部支店	TEL 052-412-3221	FAX 052-412-3229
東北営業所	TEL 022-284-1257	FAX 022-208-5930	関西支店	TEL 06-6458-5971	FAX 06-6458-5978
北関東支店	TEL 0480-96-7001	FAX 0480-96-7003	福岡営業所	TEL 092-433-1085	FAX 092-433-1103
関東支店	TEL 045-595-3660	FAX 045-595-3661			

お客様  
相談室





0800-100-1926

ホーム  
ページ


<https://www.anest-iwata.co.jp>

※携帯電話・PHSからもご利用いただけます。

■ 故障・対策

状 況	発生箇所	チェック箇所	原 因	対 策			
				検 査 の 増 し	調 整	洗 浄	部 品 交 換
空気漏れ	エアーバルブセツト部	エアージョイント バルブパネ	シート面のゴミ、キズ バルブパネのへたり			○	○
	エアーダクト先端部	○リソダ ノズル～ニードル	劣化・キズ・ゴミ シート面のゴミ・キズ・摩耗			○	○
色材濡れ		ノズル～本体	ノズル締め付け不適 シート面のゴミ・キズ			○	○
		ニードルパネ～スクリンダケース	ニードルパネのへたり			○	
		ニードル～ニードルバックス	ニードルバックスのゆるみ			○	
		ニードル～ニードル止めネジ	ニードルへの色材漏れによるニードル戻り不良			○	
		ニードル止めネジのゆるみ				○	
		ニードルバックスのゆるみ				○	
色材出ず		エアーダクト先端部	穴の詰り、ゴミ、固着			○	
		押しボタン部	ニードルバックスのゆるみ			○	
		ノズル	ノズルの詰り、ゴミ、固着			○	
		ニードル止めネジ ニードルバックス～ノズルバックス ニードル	ゆるみ 内部の汚れ 先端色材固着			○	○

■ 不完全パタン原因・対策

パタン	原 因	対 策
 葉格子(スキャッチング)	ニードル先端の色材が固着	ニードル先端の清掃
	ノズルと本体との取り付けネジ部より空気が漏入	ノズルを外し、ネジ部を清掃した上で再度取り付け
	ノズル先端が、ノズルバックスより引込まれている	ノズルバックスを締め付ける
	ノズル、ニードル、ニードルバックス先端に色材が固着	ノズル、ニードル、ニードルバックスの掃除
 粗格子(スキャッチング)	ニードル先端の曲り、ノズル先端の割れ、キズ	部品交換
	ノズルの詰り	清掃
	吹付空気圧力が低い	高くする
	色材が濃い	薄くする

● 保守・点検

▲ 警告

- ・安全にご使用いただくための警告事項の機器説明3項に従い、圧力を完全に逃がしてから作業してください。圧力が残っていると、誤作動、洗浄後の飛散により人体に危険があります。
- ・ニードルの先端がとがっているため、ご自身および他の人がケガをしないよう、取扱と保管には十分注意をして作業を行ってください。

● 保守方法

1. 使用後は、カフ内に残った色材を捨て、水またはカーリーノズルキヤツプを洗浄してください。… 図①
2. ノズルキヤツプをカフ内に入れ、押しボタンを押しながら逆流させることでノズル内を洗浄します。… 図②-1 (丁度よい効果を得られます) … 図②-2
3. ニードルを引き抜き、付着物を取り除きます。洗浄後はニードルがノズルに当たるまで戻します。… 図③



保守方法	注意
<p>1. 各部の洗浄は、洗浄液で濡らしたブラシで行い、ウエス等で拭き取ります。… 図④</p> <p>2. エアーツランジ全体をシンナー等の液中に浸さないでください。長時間浸漬した場合、Oリングおよびノズル類の損傷原因となります。</p> <p>・洗浄時、ノズルキヤツプ、ノズルの各噴出穴およびニードルは、絶対にキズをつけないでください。噴霧態が悪くなる原因となります。</p>	<p>1. 洗浄不良は、ノズル形状や粒子の不具合の原因となります。</p> <p>・ニードル先端およびノズルは、きわめて弱い部分です。から丁寧に扱ってください。</p>
<p>3. 分解する前は、色材通路内部を十分洗浄します。</p>	<p>3. ノズルを外す場合は、専用スプーンを使用してください。シフト部保護のため押しボタンを引き、ニードルを引いた状態で行ってください。</p>



▲ エアーツランジ全体を液体に浸さないで下さい。カフ内に塗料、洗浄液、などを入れたままエアーツランジを保管しないで下さい。

● 点検

点検箇所	部品交換基準
1. キヤツプセットおよびノズルの各穴の通路	・つぶれ、変形がある場合
2. ノズル、Oリング類	・変形、摩耗の場合
3. ノズル、ニードル間のシフト部	・ノズル、ニードルの洗浄を十分行っても、濡れがある場合 ノズル単品、ニードル単品で交換する場合、ニードル止めネジをゆるめ、ニードルがノズルに当たっている状態でニードルを2〜3回、回すこと(摺り合わせ)を実施し、濡れがないことを確認してください。 ・ノズル交換の際、ノズル専用スプーンを使い、加減しながら適度に締め付けてください。他の工具の使用は、ネジ折れや芯狂いの原因となります。
4. ニードルの先端	・曲り折れがある場合 ニードルの曲がったものを元に戻しても使用できません。ニードル先端の曲り、折れは噴霧状態が悪くなるばかりでなく、ノズル先端や内径にキズをつける原因となりますので、速やかに新品と交換してください。

## ■ 使用方法

### ● 接続方法

#### △ 注意

エアフィルタを通した圧縮空気を使用してください。作業に使用する空気が汚れていると吹き付け不良を起します。購入後初めてご使用になる際は、色材通路内部の防錆油を取り除くため、洗浄液を吹き付け内部の洗浄を行ってください。


(はじき:塗膜が押しのけられたような凹みが生じる現象)

・エアホース、色材容器は、エアブラシにしっかりと面定してください。

・エアホースの外れ、容器の落下により、人体に傷害を起す可能性があります。

1) エアホースは、エアブラシ専用の短いホースを使用してください。φ2×φ4mmチューブ(HPA-SH32)等

2) 吹付空気圧力は、0.10～0.29MPaにて使用します。一定圧力の空気を取り出すためには空気減圧弁、空気圧縮機から出る水、塵埃を除去するためにはエアフィルタを使用してください。

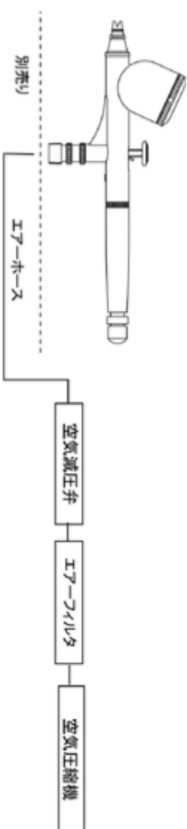

### ● 吹き付け

#### 重要

ノズルが詰まる場合がありますので、色材を細い紙にて充分通してから使用してください。

・トリセットハンドルは、ノズルの引きしろを調整しながら色材噴出量を調節するものです。軽くねじ込み、当たった位置がノズル全開の位置です。決してトリセットハンドルを全開の位置から締め込まないでください。さらに締め込みますと、ノズルが破損します。

・OH-SB2用カペーは調整しないでください。本体のカペーであり調整部ではありません。

・ノズルキャップ、ノズルの内径には、絶対キズを付けないでください。噴霧状態が悪くなる原因となります。

・種類の異なる色材(例:塗料と染料)を混ぜると色材の粘度が上がり、吹き付け不能となりますのでご注意ください。

1) 使用前にニードル止めネジをゆるめ、ニードルをノズルに当たるまで静かに押し込み、ニードル止めネジを再び締めおきます。洗浄液をカッパに入れ、色材通路を洗浄してください。

2) 吹き始めは、①押しボタンを人差指または親指で下へ押し空気を出します。②空気をしながら手前に引きますと色材を噴出します。吹き終わりは、必ず押しボタンを前に戻してから指を離してください。押しボタンを下に押さない(空気が出ない状態)で手前に引きますと色材が吹きします。



エアブラシを画面に近づけたり離したりすると図のようにノズル幅が変わります。




■主要仕様

形式	色材供給方式	噴霧方式	ヘッドシステム	容器容量 (ml)	最高吹付圧力 (MPa)	備考
TAKUMI	吸上式	噴霧式	C1	1.5		サイトホルム式
CM-B2	重力式	丸吹き	C1	0.4	0.29	
CM-C2			C2	7		
CM-CP2						

備考:

- 1)トリセツトハンドルで色材吐出量が調整できます。
- 2)CM-CP2は、空気調節ツマミで空気吐出量が調整できます。
- 3)CM-SB2は、カフセツトを左右どちらでも取付けできます。
- 4)吹付空気圧力は、押しボタンを押し、空気を流し止めの吹付空気入口の圧力です。
- 5)キヤップロックはニードルキヤップの紛失を防ぐ機能です。ニードルキヤップを外し、キヤップロック部分に押し出し、取付けてください。
- 6)使用温度範囲:5~40℃

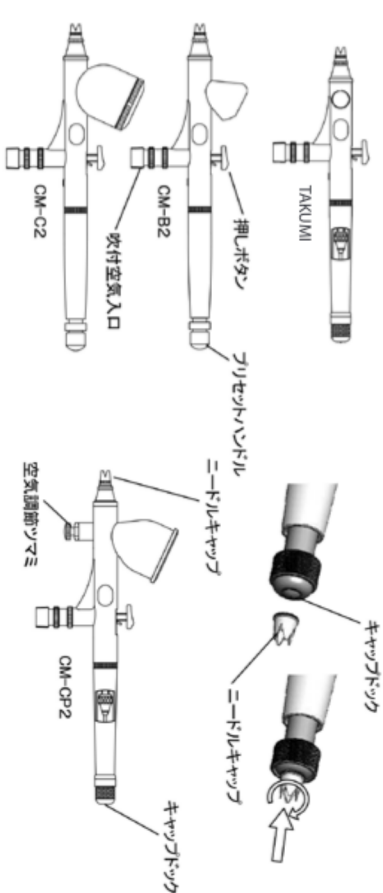

■部品構成

- 部品をご注文の際は、エアーブラシの形式および品名をご指定ください。
- ◎ 開封前、破損や欠品がないことを確認してください。
- ◎ 欠品、輸送上の損傷がある場合は、危険防止のため使用せず、お買い求めの販売店または当社営業所までご連絡ください。
- ◎ エアーブラシ形式は、本表に表示されています。

№	部品名称	CM-B2	CM-C2	TAKUMI	CM-CP2	備考
1	ニードルキヤップ	△	△	△	△	
2	ノズル	△	△	△	△	
4	ノズル	△	△	△	△	
6	ノズル	△	△	△	△	
6-1	ノズル	△	△	△	△	
7	ノズル	△	△	△	△	
8	ノズル	△	△	△	△	
10	ノズル	△	△	△	△	
11	ノズル	△	△	△	△	
12	ノズル	△	△	△	△	
17	ノズル	△	△	△	△	
19	ノズル	△	△	△	△	
21	ノズル	△	△	△	△	
22	ノズル	△	△	△	△	
23	ノズル	△	△	△	△	
24	ノズル	△	△	△	△	
25	ノズル	△	△	△	△	
25-1	ノズル	△	△	△	△	
27	ノズル	△	△	△	△	
27-1	ノズル	△	△	△	△	
28	ノズル	△	△	△	△	
29	ノズル	△	△	△	△	
30	ノズル	△	△	△	△	
32	ノズル	△	△	△	△	
33	ノズル	△	△	△	△	
33-1	ノズル	△	△	△	△	
42	ノズル	△	△	△	△	

●印は標準品です。  
 ◎印は特殊品を示します。□印は専用部品を示します。  
 ※風量調節S2、S1は、風量調節ノズル取付け専用部品です。  
 ※風量調節S2、S1は、風量調節ノズル取付け専用部品です。

この取扱説明書は、安全にご使用いただくために重要な警告および注意事項、取扱い方法について記載しています。ご使用前に、必ずお読みになり、十分理解してからご使用ください。本書はすべて確認できる場所に保管してください。

The English version is Printed on the back page.

## ■ エアブラシ PROFESSIONAL AIRBRUSHES

Custom Micron

AIRBRUSH SERIES

CM-B2・TAKUMI・C2・CP2 (日本専用型式)

この取扱説明書に示された警告事項および注意事項は必ず守ってください。

使用時に不意に色材が噴出したり、有機溶剤の吸引により重大な身体上の障害を起こすことがあります。

△印付きの下記ページは、安全上、特に重要な項目ですので必ずお守りください。

<b>△ 警告</b>	警告内容を怠った場合、人が死亡または重傷を負う可能性が想定されることを示します。
<b>△ 注意</b>	注意内容を怠った場合、人が傷害を負う可能性、または物的損害の発生する可能性が想定されることを示します。
<b>重要</b>	この記号は、機械の性能や機能を十分に発揮してお使いいただくために守っていただきたい内容を示しています。なお、本取扱説明書で示す安全事項は、必要最低限のものであります。なお、本取扱説明書で示す安全事項は、必要最低限のものであります。なお、本取扱説明書で示す安全事項は、必要最低限のものであります。国や自治体の消防、電気、安全関連の法規、規則、それぞれの企業や事業所で規則、規定として守るべき事項に従ってください。

### ■ 安全にご使用いただくための警告事項

#### △ 警告

##### 火災と爆発

- 吹き付け作業中は、火気厳禁。
  - 色材は引火性があり火災の危険性があります。
  - (ラッカー、セラックスニスなどの有機溶剤系)
  - ・ たばこ、点火、電気機器等、引火の恐れがあるものは、必ず離れた所でご使用ください。
- 次のハロゲン化炭化水素系溶剤は使用しない。
  - 化学反応により、本体（アルミニウム部分）にクラック、溶解が発生します。
  - 不適合溶剤：塩化メチル、塩化エチル、二塩化メチレン、四塩化炭素、トリクロルエチレン、1,1,1-トリクロロエタン等
  - (特殊な色材やソリューションは充分適合性を検討した上でご使用ください。適合性検討のための材質リストを提出する用意があります。)



##### 機器誤用

- ボディアヘンディング、ネイルアート等の専用色材で吹き付けする用途以外、人体や動物に向けて絶対にスプレーしない。目や皮膚の炎症、人体への危険があります。
- 最高使用圧力以上でのご使用は絶対に避けてください。エアブラシが、破損・破裂し非常に危険です。
- 洗浄、分解、保守作業をする前および作業中断時は、必ず色材と空気の圧力を逃がす。圧力が残っていると、誤作動、洗浄液の飛散により人体に危険があります。圧力を逃がす方法はエアブラシへの圧縮空気の供給を停止し、押しボタンを軽く押すことにより行います。



##### 人体保護

- 吹き付け作業は、換気扇等を使用し換気の良いところで使用。換気が不十分ですと色材の吸い込みによる健康障害や引火の危険が増えます。
- 常に適切な服装または保護具を着用。(眼鏡、マスク、手袋) 目や皮膚に洗浄液等がつかき炎症を起こします。目や皮膚に異常を感じたら直ちに医師の治療を受けてください。



##### その他

- 製品の改造はしない。十分な性能が発揮できないばかりか故障の原因となります。
- 食品用や化学薬品用には使用しない。色材通路内部の腐食による事故発生や異物混入による健康障害の可能性があります。